

CARGO



HAUL MORE OF THE WORLD AROUND YOU.



*Properly secure all cargo

You need space to work? Think about what you can do with up to 600 cubic feet of space. Haul all your tools. Haul all your equipment. Haul pretty much anything and everything you can imagine.

The Freightliner Sprinter Cargo Commercial Utility Vehicle (CUV) offers best-in-class* payload capacity, best-in-class* cargo capacity, best-in-class* rear and side door opening areas and best-in-class* standard interior standing height.

All in all, this Cargo CUV was engineered to improve the way you work. Add state-of-the-art safety features like Adaptive ESP^{®†} and two powerful engine options and you've got a work vehicle that offers more to haul more.

 
Powered and designed by Mercedes-Benz.
fl-sprinter.com

Freightliner
SPRINTER
FORWARD MOTION




CARGO


MEGA ROOF

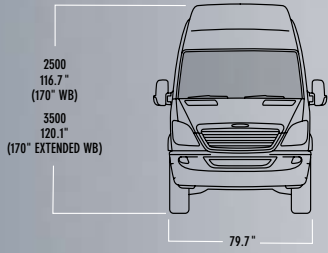


HIGH ROOF

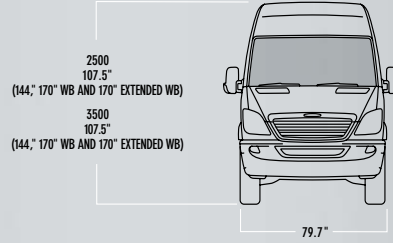 


STANDARD ROOF

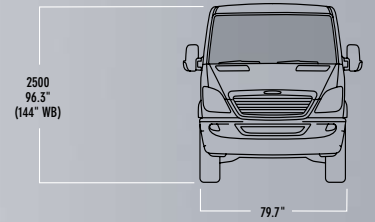 


170" WHEELBASE EXTENDED

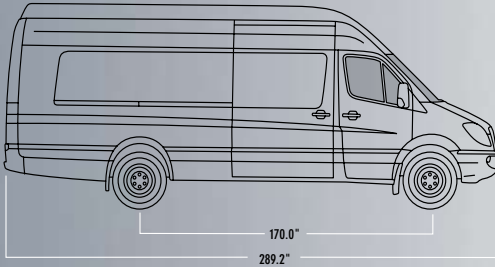 

170" WHEELBASE

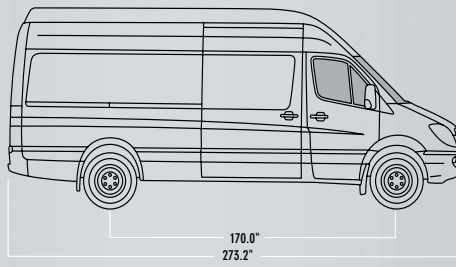 

144" WHEELBASE

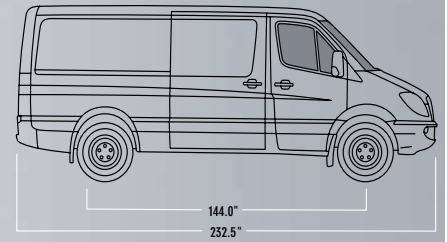 

	2500 STANDARD		2500 HIGH ROOF		2500 MEGA ROOF		3500 HIGH ROOF		3500 MEGA ROOF	
	144" WB	144" WB	170" WB	170" WB EXT	170" WB	144" WB	170" WB	170" WB EXT	170" WB EXT	170" WB EXT
TURNING DIAMETER (FT) WALL TO WALL	47.6	47.6	54.6	54.6	54.6	47.6	54.6	54.6	54.6	54.6
GROUND TO SLIDING DOOR STEP — SIDE	20.2	20.2	19.9	19.9	19.9	22.0	21.2	21.2	21.2	21.2
LOAD HEIGHT — REAR	27.6	27.6	27.4	27.2	27.4	31.1	30.9	30.9	30.9	30.9
DOOR OPENING — SIDE	59.8	71.7	71.7	71.7	71.7	71.7	71.7	71.7	71.7	71.7
DOOR OPENING — REAR	60.6	72.4	72.4	72.4	72.4	72.4	72.4	72.4	72.4	72.4
DOOR WIDTH — SIDE	51.2	51.2	51.2	51.2	51.2	51.2	51.2	51.2	51.2	51.2
DOOR WIDTH — REAR	61.6	61.6	61.6	61.6	61.6	61.6	61.6	61.6	61.6	61.6
CARGO BED LENGTH	128.5	128.5	169.3	185.0	169.3	128.5	169.3	185.0	185.0	185.0
CARGO WIDTH AT WHEELHOUSE	53.1	53.1	53.1	53.1	53.1	38.5	38.5	38.5	38.5	38.5
MAXIMUM WIDTH AT FLOOR	70.1	70.1	70.1	70.1	70.1	70.1	70.1	70.1	70.1	70.1
INTERIOR HEIGHT	65.0	76.4	76.4	76.4	84.3	76.4	76.4	76.4	84.3	84.3
CARGO VOLUME (CU FT)	318.0	371.0	494.0	547.0	530.0	371.0	494.0	547.0	600.0	600.0
MAXIMUM AVAILABLE GVWR (LB)	8,550	8,550	8,550	8,550	8,550	11,030	11,030	11,030	11,030	11,030
BASE CURB WEIGHT (LB)	4,784	4,936	5,267	5,395	5,326	5,460	5,862	5,978	6,041	6,041
MAXIMUM PAYLOAD (LB)	3,839	3,760	3,428	3,301	3,369	5,570	5,168	5,052	4,989	4,989
MAXIMUM TOWING (LB)	5,000	5,000	5,000	5,000	5,000	5,000	5,000	5,000	5,000	5,000
MAXIMUM AVAILABLE GCWR (LB)	13,550	13,550	13,550	13,550	13,550	15,250	15,250	15,250	15,250	15,250
FUEL TANK CAPACITY (GAL)	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0

INCHES UNLESS OTHERWISE SPECIFIED.

Some specifications and features shown or mentioned in this brochure are optional and only available upon request at extra cost. Specifications are subject to change without notice.

THE EASY WAY
TO UPFIT. **e**EQUIP
WWW.FL-SPRINTER.COM/EQUIP

*Based on Automotive News classification.
† No system, no matter how sophisticated, can repeal the laws of physics or overcome careless driving actions. Performance is limited by available traction, which snow, ice and other conditions can affect. When the ESP warning lamp in the speedometer flashes, the driver needs to use less throttle and adapt speed and driving behavior to prevailing road conditions. Always drive carefully, consistent with conditions. Always wear your seat belt.

Freightliner
SPRINTER
FORWARD MOTION